




### Oil Press gauge

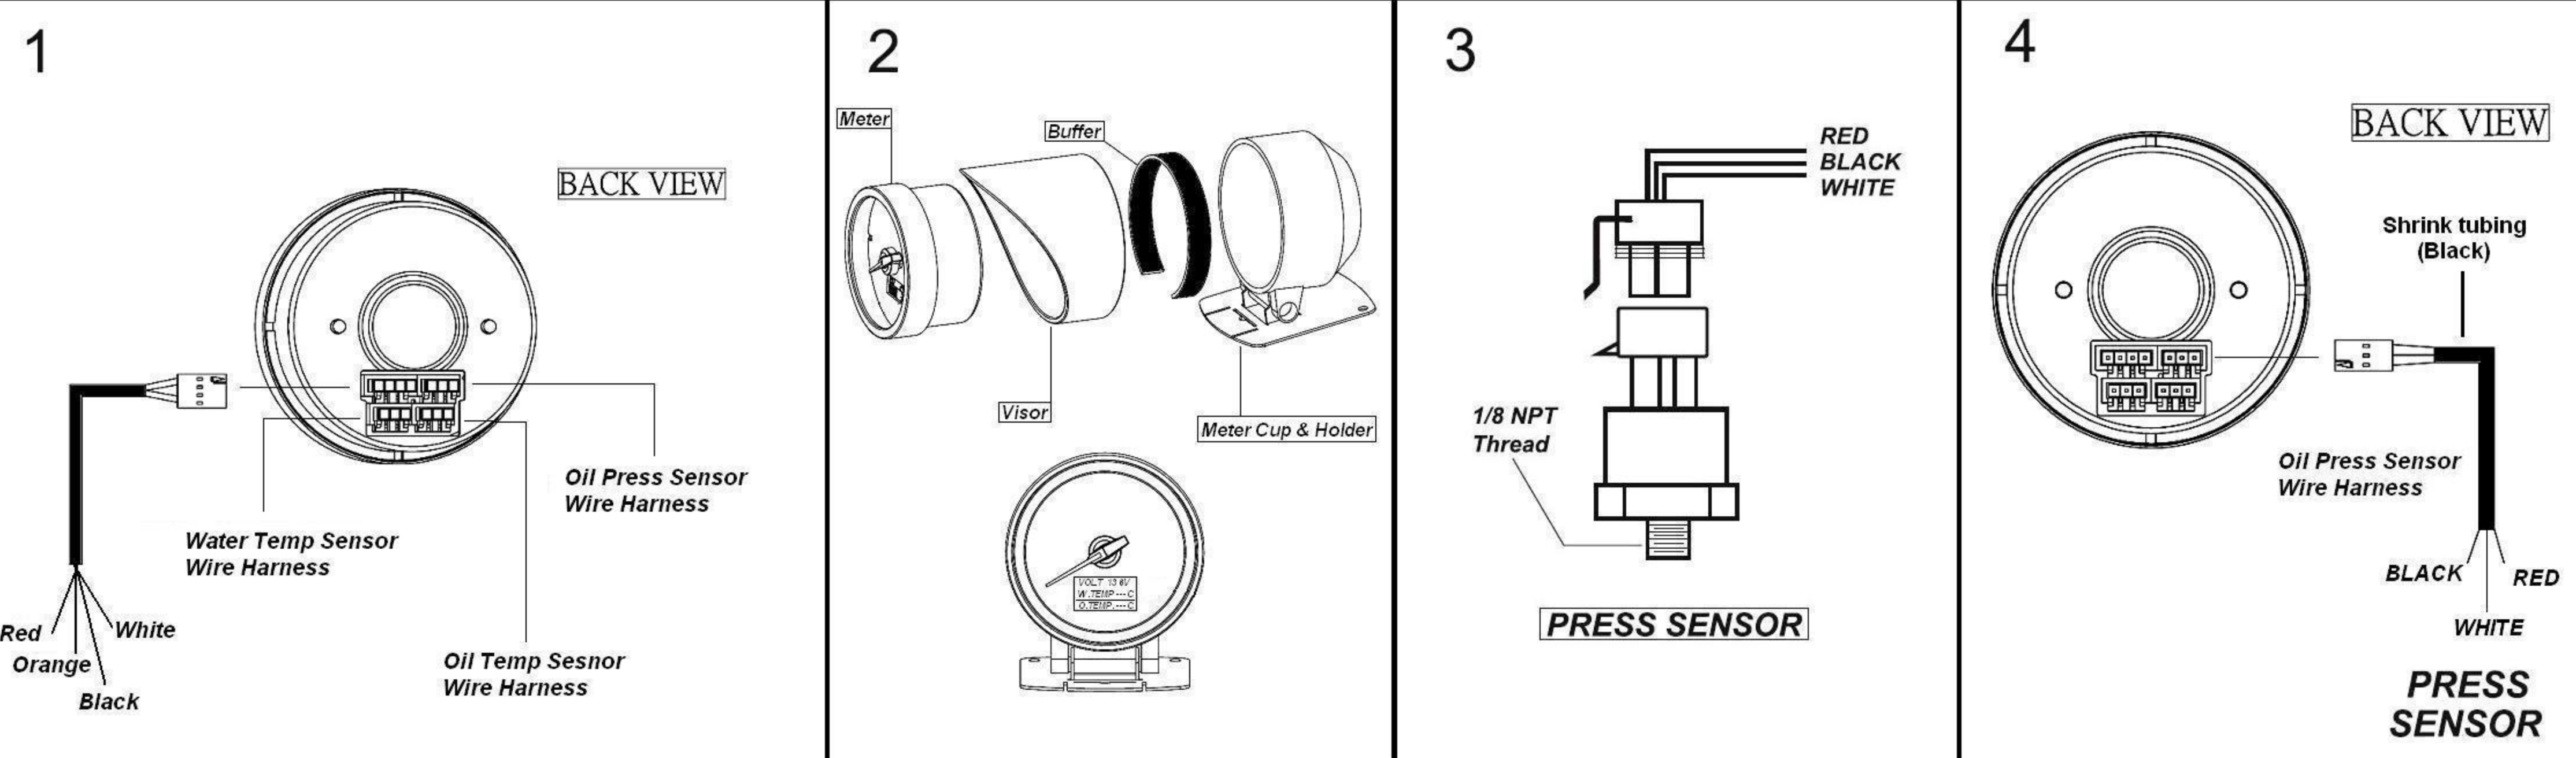

### Oil Temp Gauge

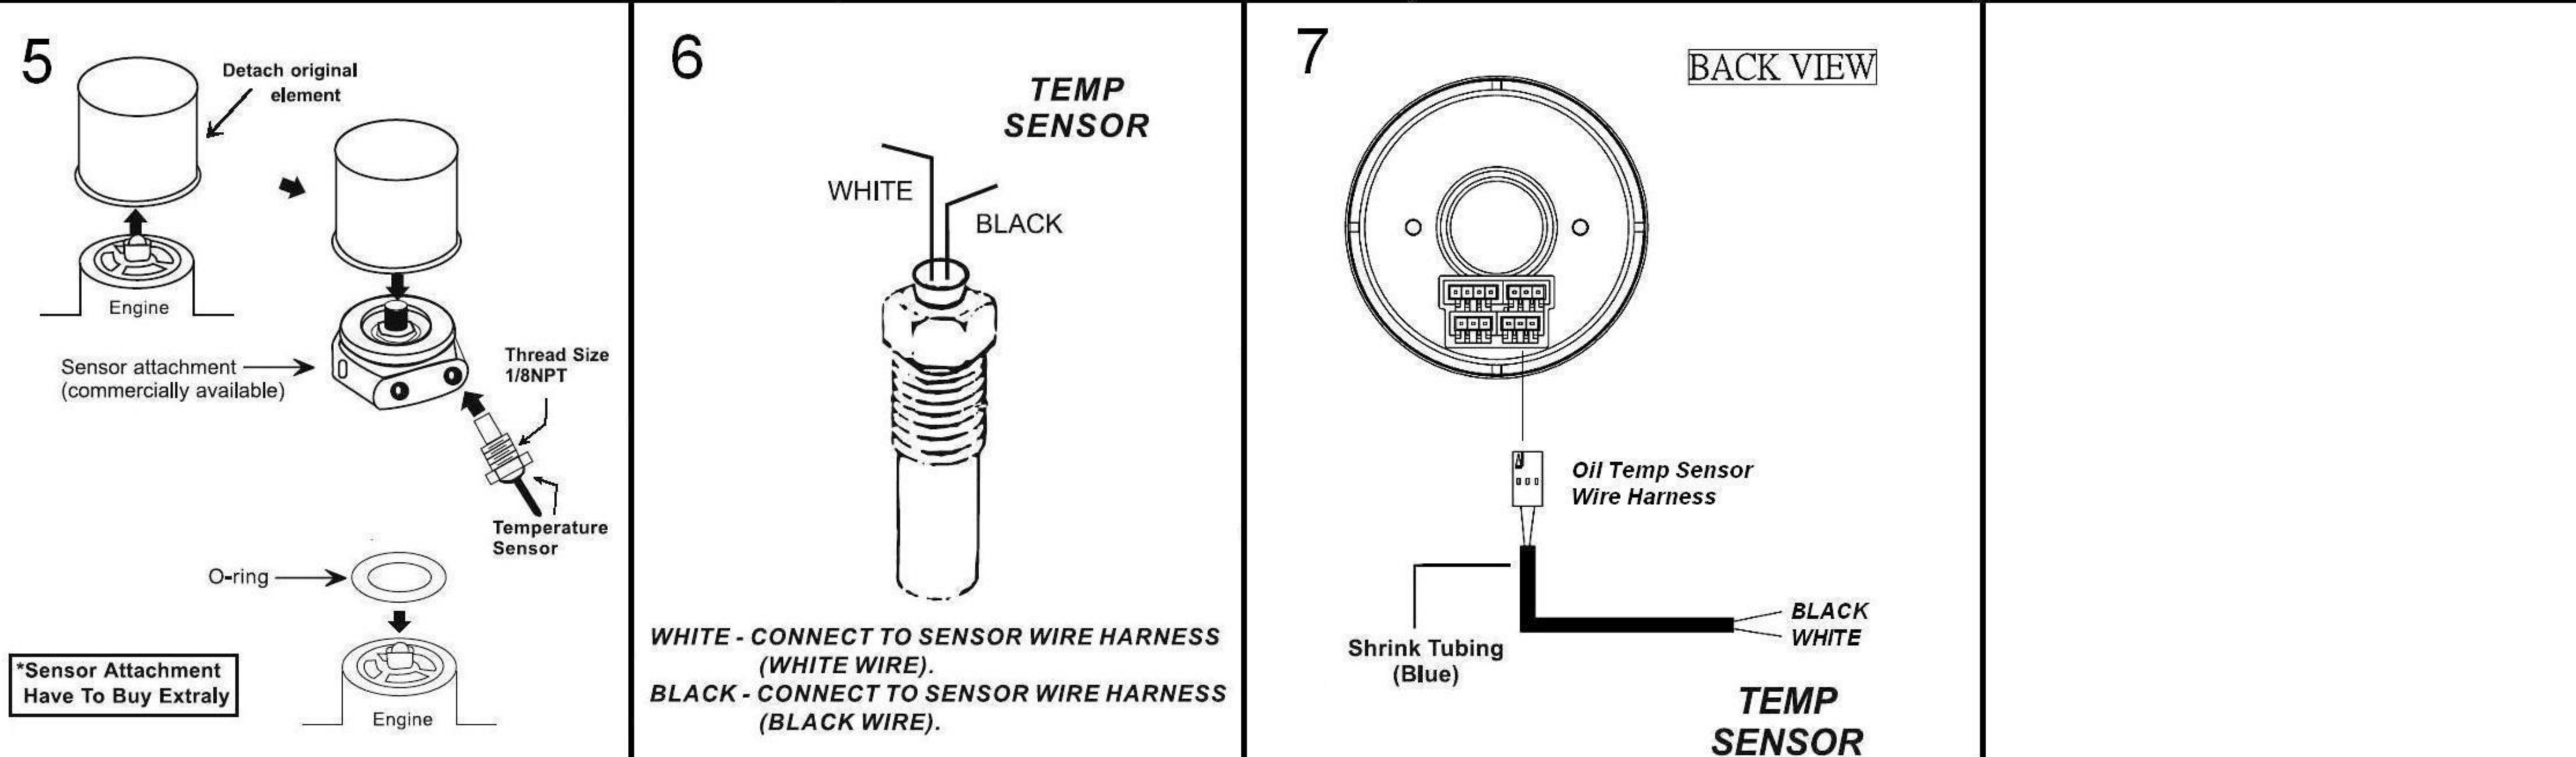

### Water Temp Gauge

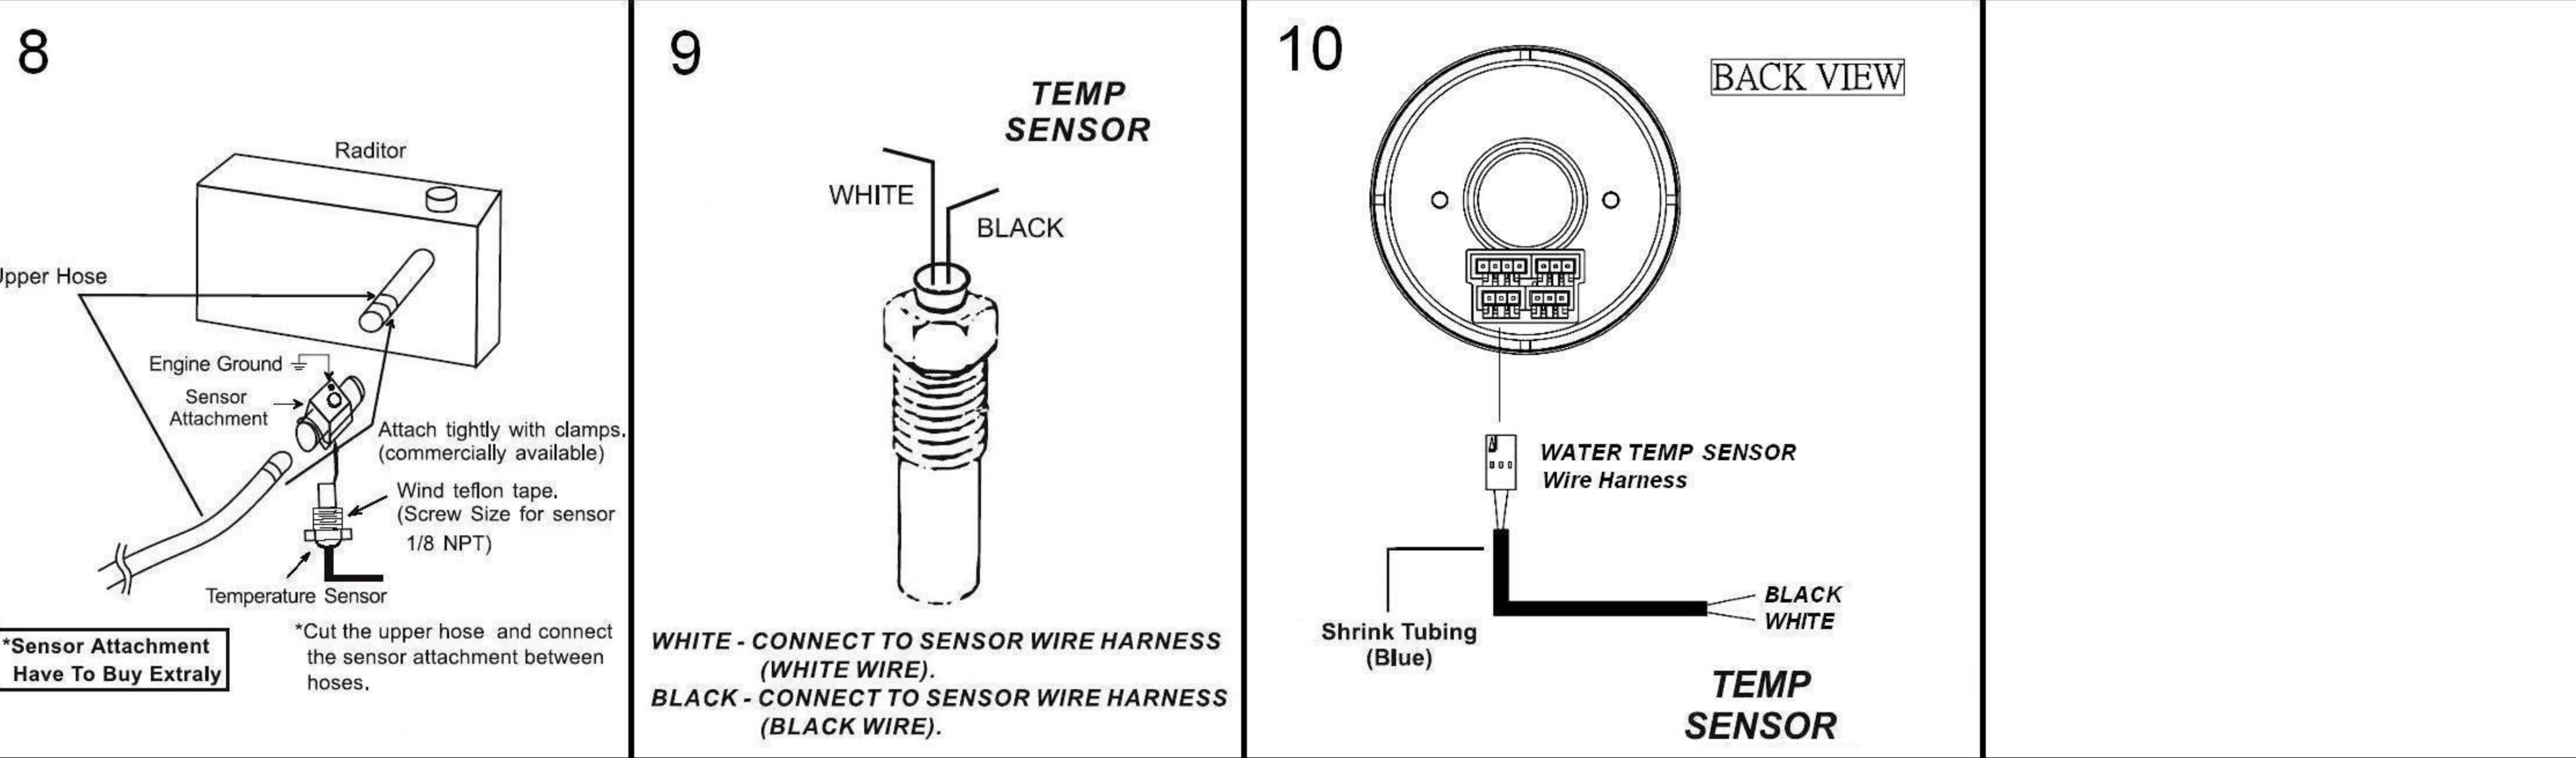

- 1.Connect power wire (RED) to +12V battery wire.

2.Connect power wire(BLACK) to ground, negative (-) battery terminal or a good chassis ground.

3.ORANGE - Note

4. WHITE - Note
- ⇒

NOTE: GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		INSTALLATION
DAYTIME	NIGHT TIME	
WHITE SCALE	WHITE SCALE	WHITE WIRE → CONNECT TO ACC ORANGE WIRE → NO CONNECT
AMBER RED SCALE	AMBER RED SCALE	WHITE WIRE→ NO CONNECT ORANGE WIRE→ CONNECT TO ACC
WHITE SCALE	AMBER RED SCALE	WHITE WIRE → CONNECT TO ACC ORNAGE WIRE → CONNECT TO PARKING LAMP
AMBER RED SCALE	WHITE SCALE	ORANGE WIRE→ CONNECT TO ACC WHITE WIRE → CONNECT TO PARKING LAMP