

INSTALLATION INSTRUCTIONS


ELECTRICAL GAUGES

STEP MOTOR MOVEMENT JAPAN


SMOKE LENS SERIES WHITE & AMBER LED DISPLAY

OPENING CEREMONY


Boost Gauge

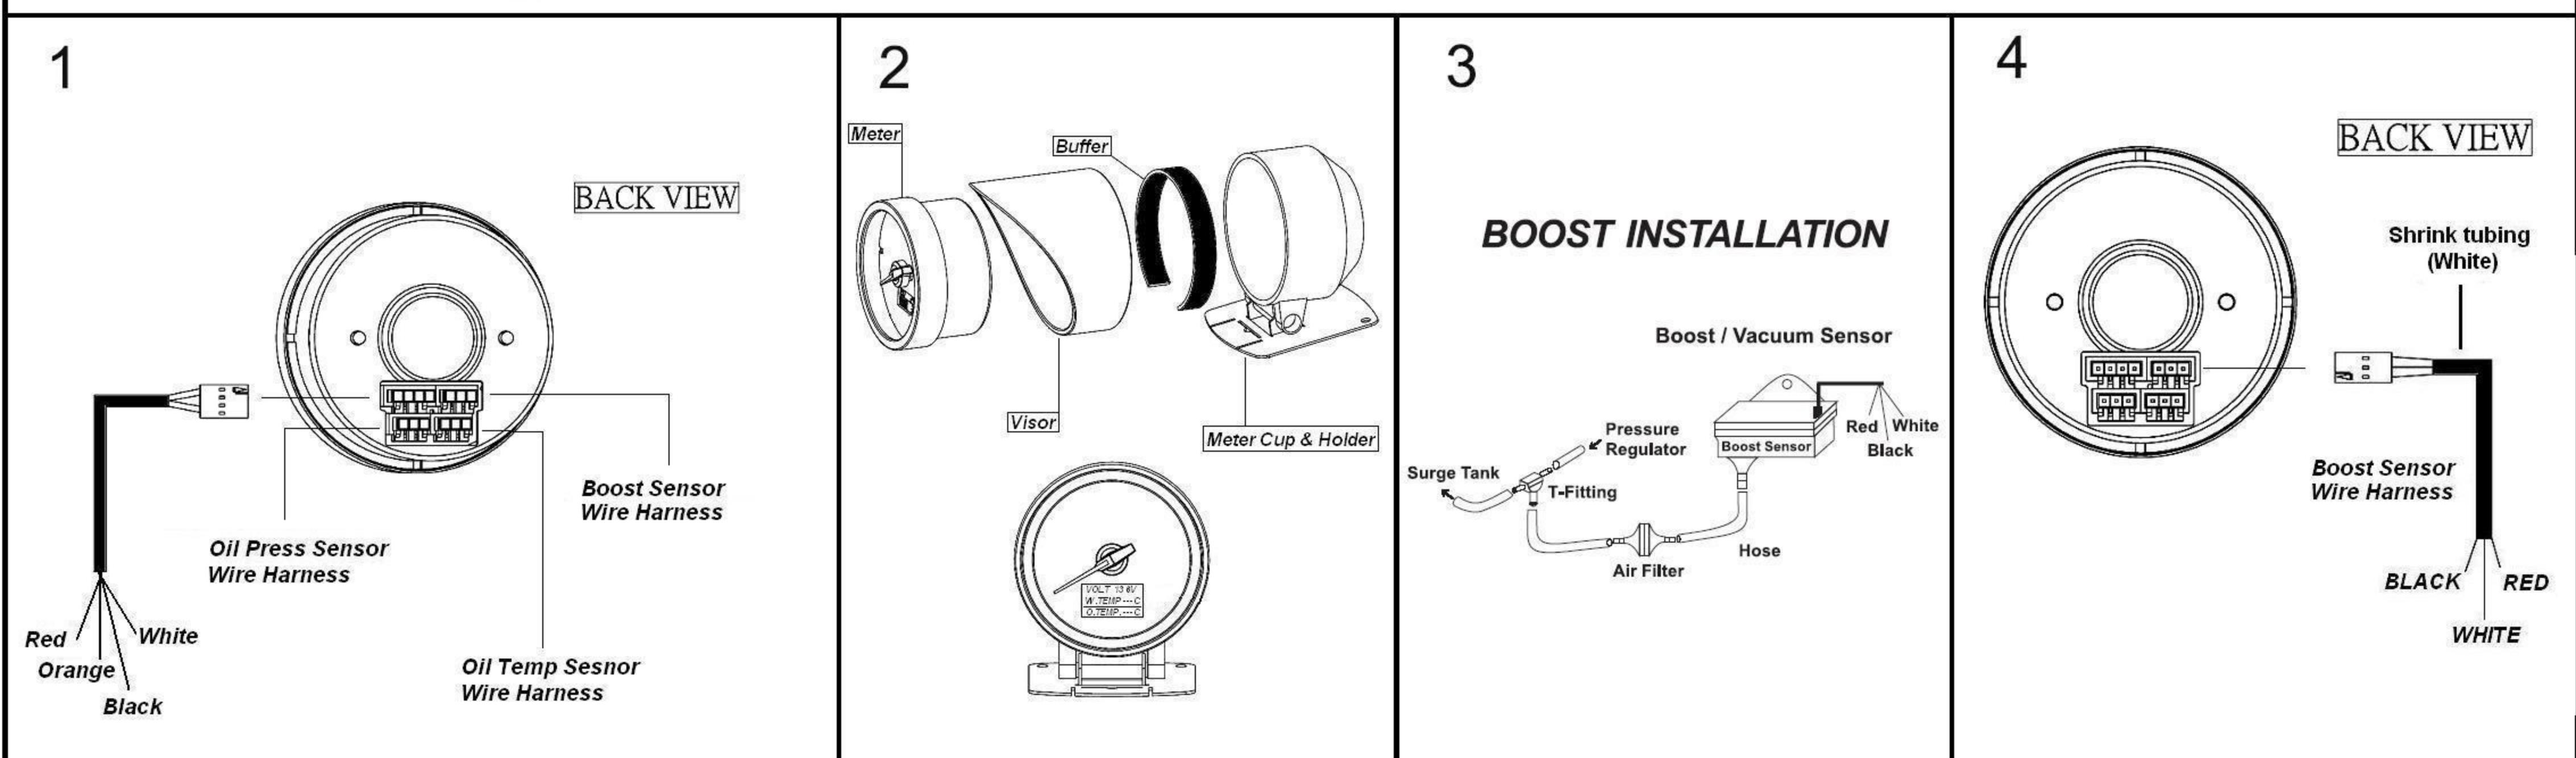

Oil Temp Gauge

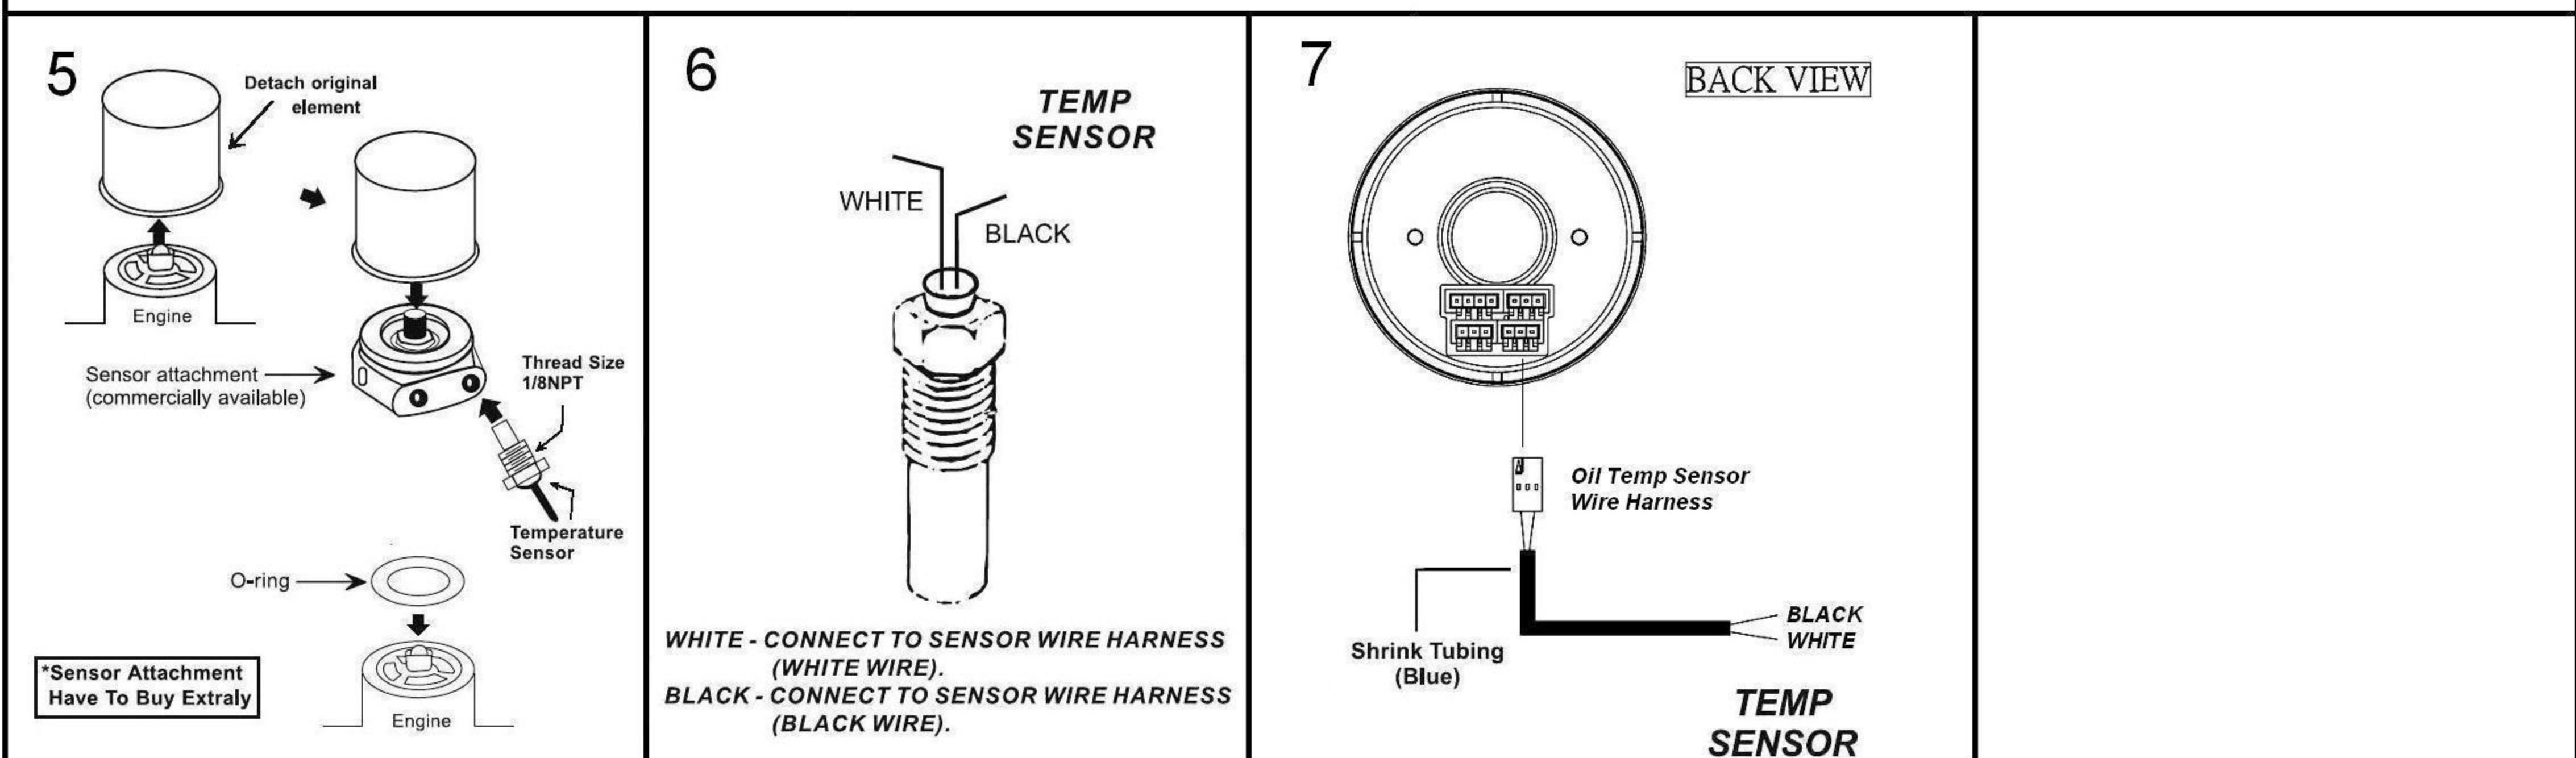

Oil Press gauge

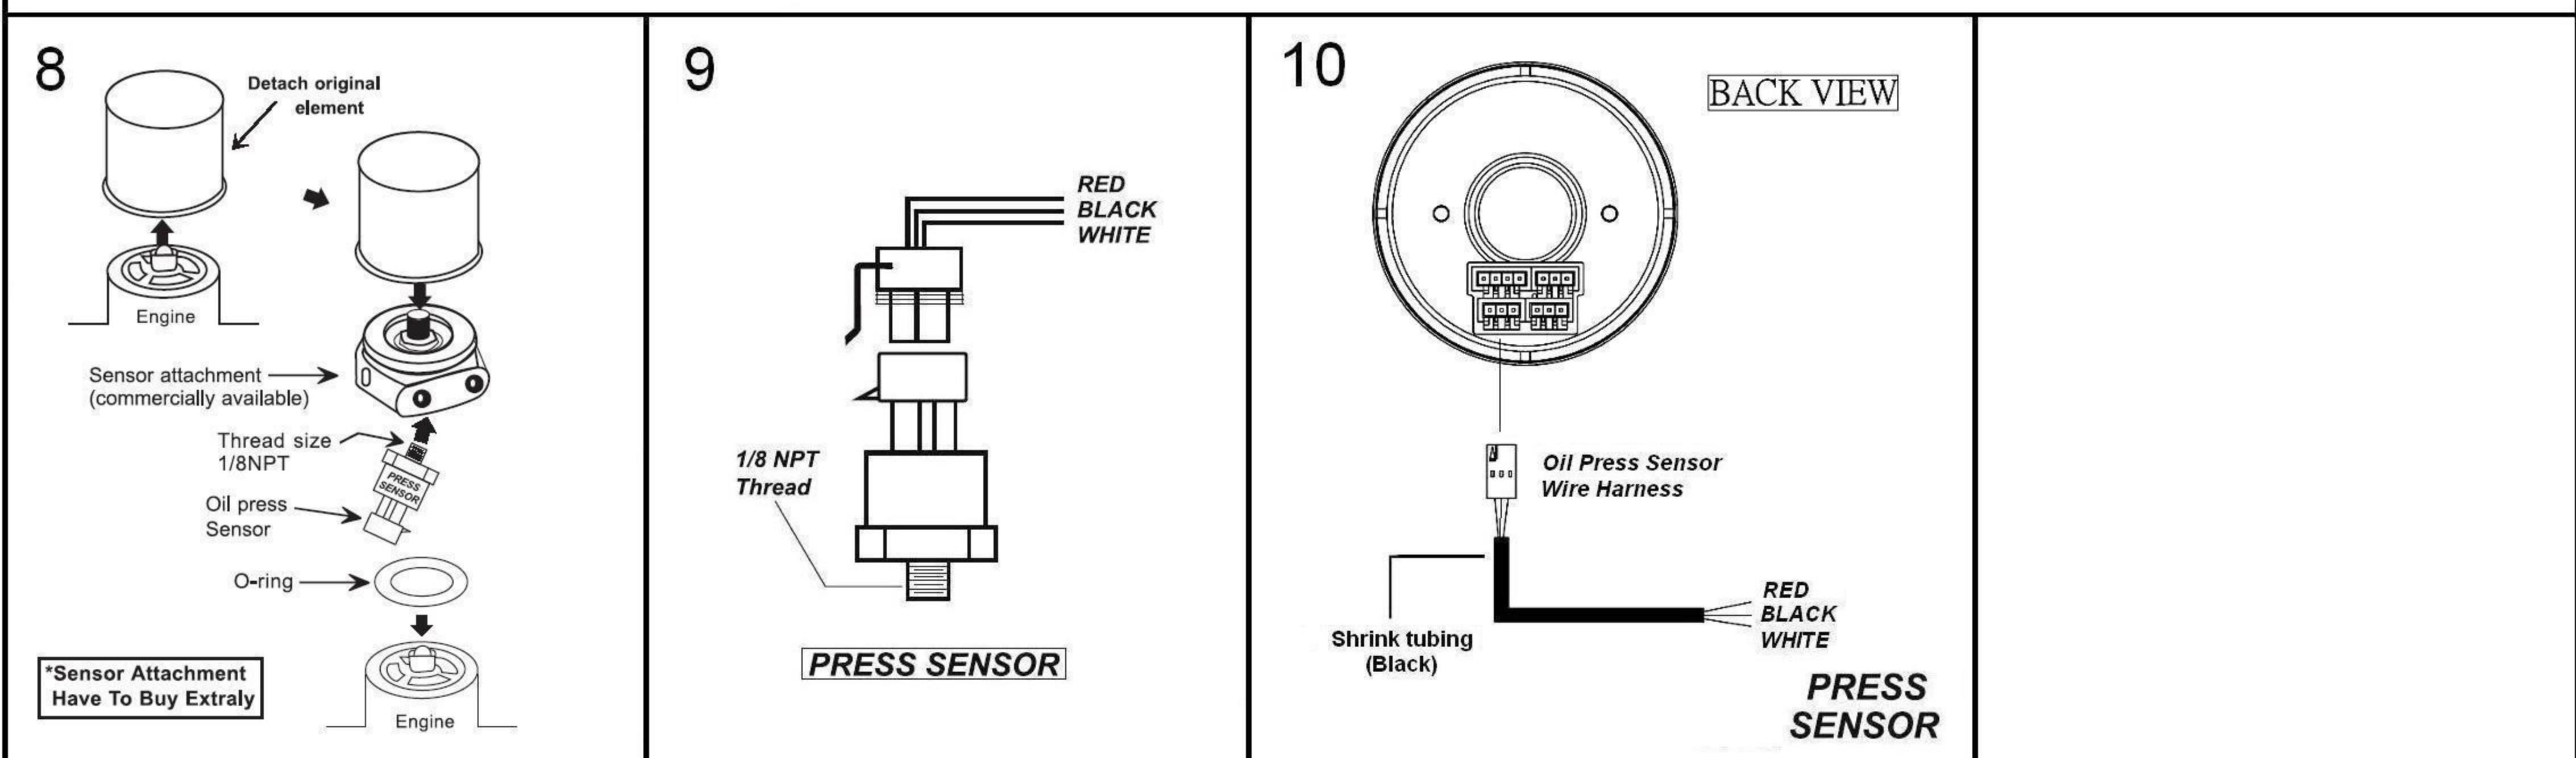

1. Connect power wire (RED) to +12V battery wire.
2. Connect power wire (BLACK) to ground, negative (-) battery terminal or a good chassis ground.
3. ORANGE - Note
4. WHITE - Note

==>

NOTE: GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		INSTALLATION
DAYTIME	NIGHT TIME	
WHITE SCALE	WHITE SCALE	WHITE WIRE → CONNECT TO ACC
		ORANGE WIRE → NO CONNECT
AMBER RED	AMBER RED	WHITE WIRE → NO CONNECT
	SCALE	ORANGE WIRE → CONNECT TO ACC
WHITE SCALE	AMBER RED	WHITE WIRE → CONNECT TO ACC
	SCALE	ORANGE WIRE → CONNECT TO PARKING LAMP
AMBER RED	WHITE SCALE	ORANGE WIRE → CONNECT TO ACC
		WHITE WIRE → CONNECT TO PARKING LAMP